



INSTALLATION INSTRUCTIONS

Accessory

CUP HOLDER LIGHT
P/N 08E11-TG7-100A

Application

2020 PILOT

Publications No.

VERSION 1

Issue Date

JUL 2019

PARTS LIST

Console panel



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Masking tape

10 mm Open end wrench

Shop towel

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Cup Holder Light on the Vehicle





CONSOLE PANEL CH22201AB

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."


1. Disconnect the negative cable from the battery:
 - Wrap a shop towel around the hood latch.

HOOD LATCH (Wrap with a shop towel.)

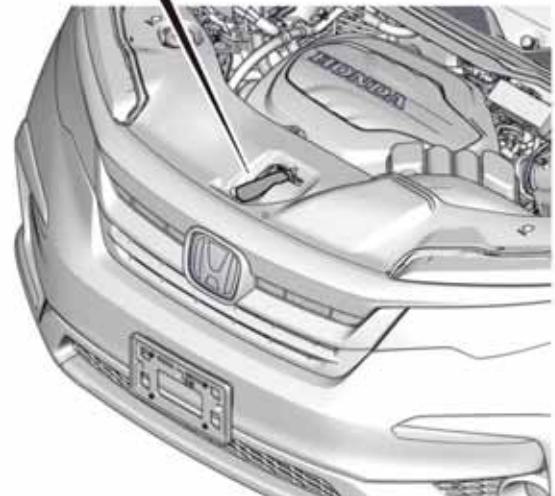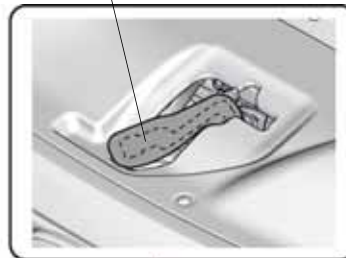


CH21201AB


- Remove the front bulkhead cover.

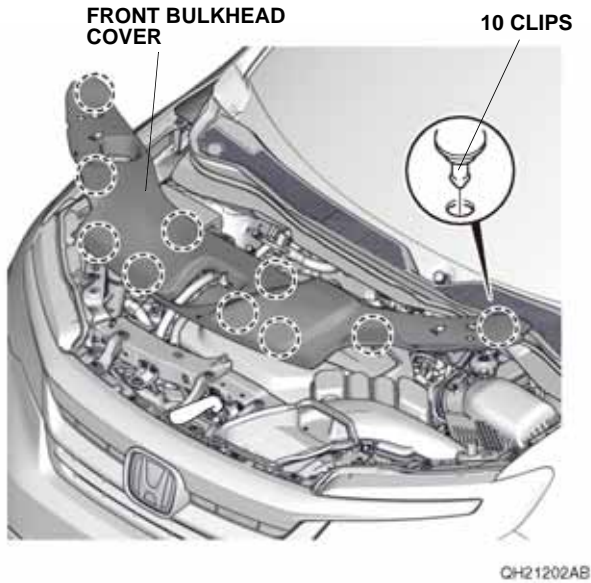

- Remove the intake air tube.
- Disconnect the negative cable from the battery.

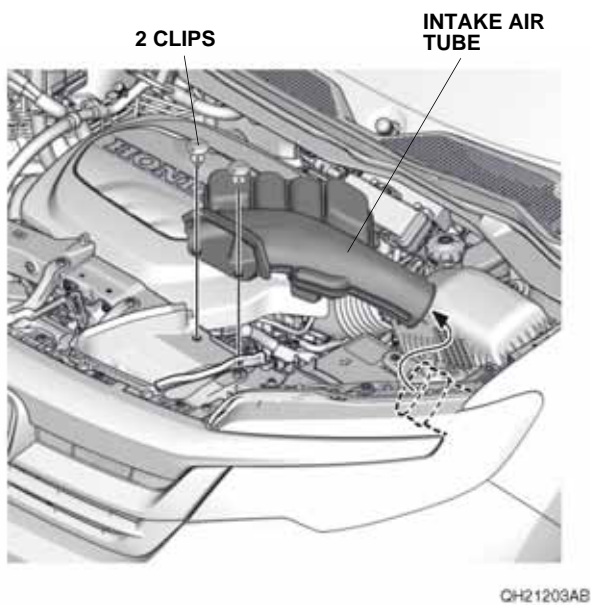

- Open the lid. Remove the cover, and insert the key into the cover opening. Push on the key, move the shift lever to Drive.

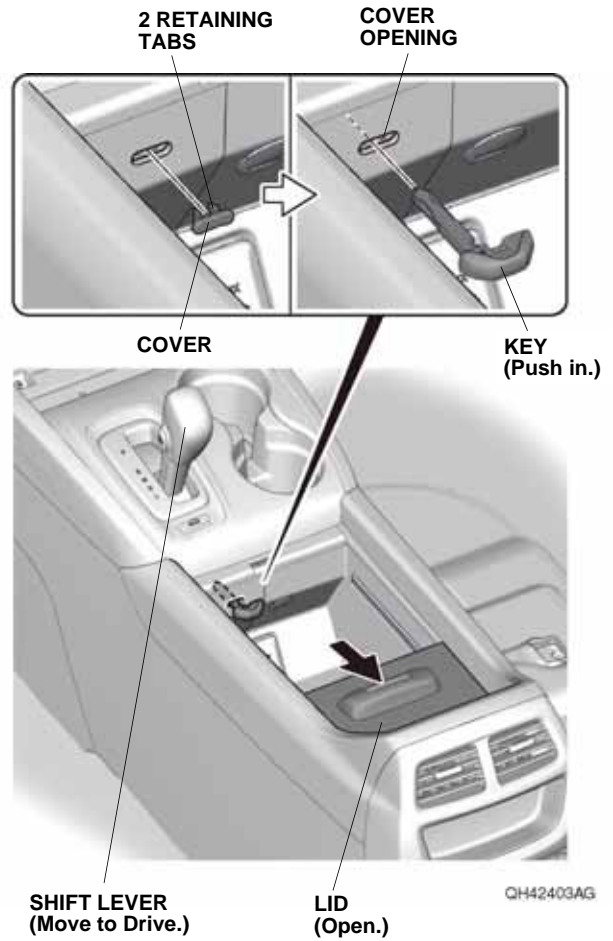

- Remove the key, and install the cover.


4. Remove the center tray.



5. Apply masking tape to the shift lever knob.




6. Remove the console panel, and release the vehicle clip. Unplug the vehicle connector if equipped.

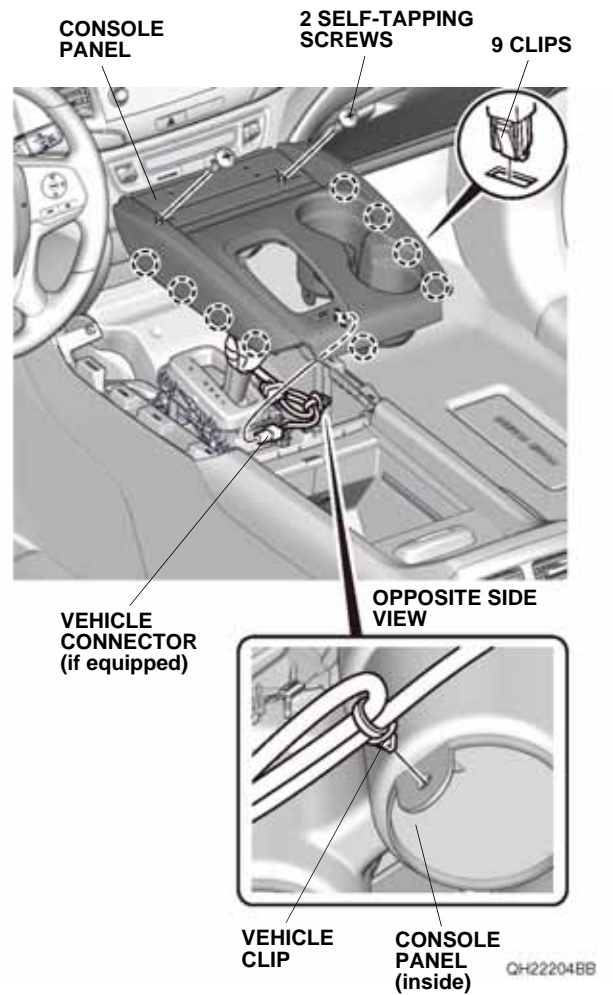


If the vehicle is equipped with the vehicle switch, continue with step 7; otherwise, go to step 9.

With vehicle switch

7. Remove the vehicle switch from the console panel removed in step 6.

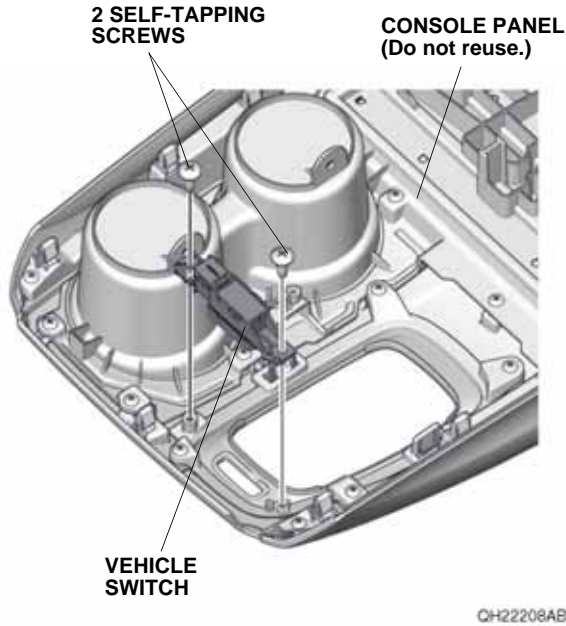


8. Install the vehicle switch to the new console panel with the two self-tapping screws removed in step 7. Go to step 12.

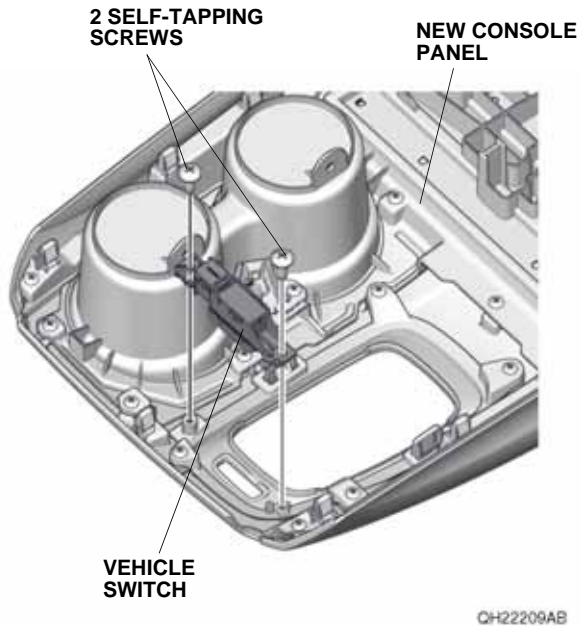


Without vehicle switch


9. Remove the shift lever trim from the console panel removed in step 6.

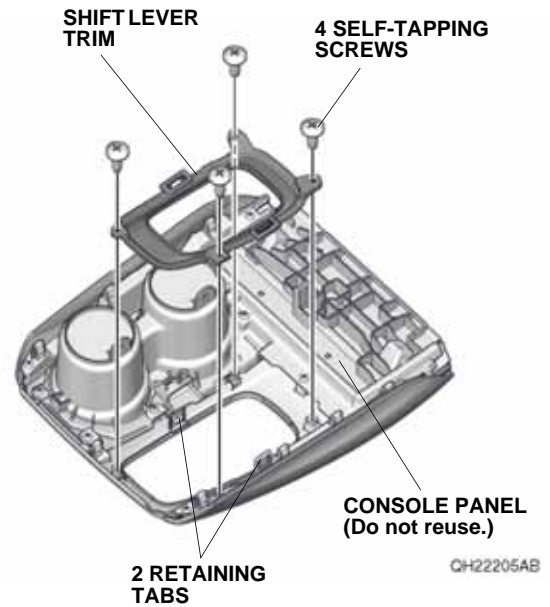

10. Remove the shift lever trim from the new console panel.

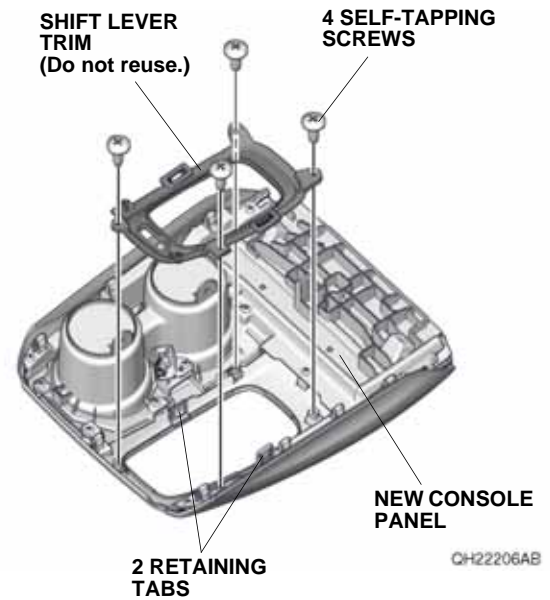


11. Install the shift lever trim to the new console panel with two retaining tabs and four self-tapping screws removed in step 9 or 10.

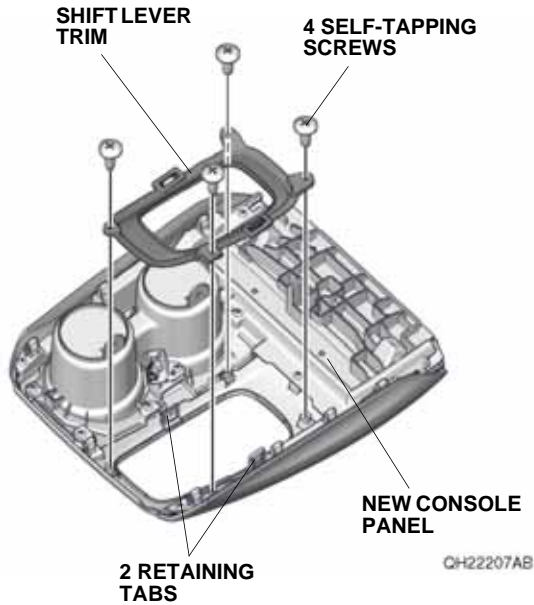


If the new console panel side trims color do not match the vehicle console panel side trims color, continue with step 12; otherwise, go to step 15.

New console panel side trims color do not match the vehicle console panel side trims color


12. Remove the left and right side trim from the removed console panel.

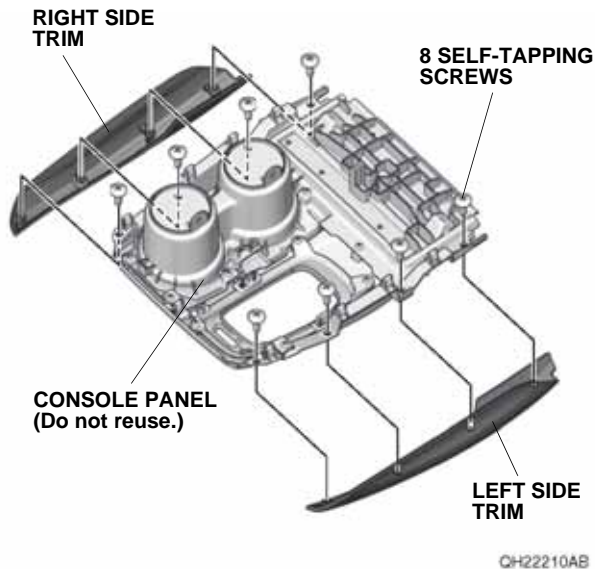


13. Remove the left and right side trim from the new console panel.

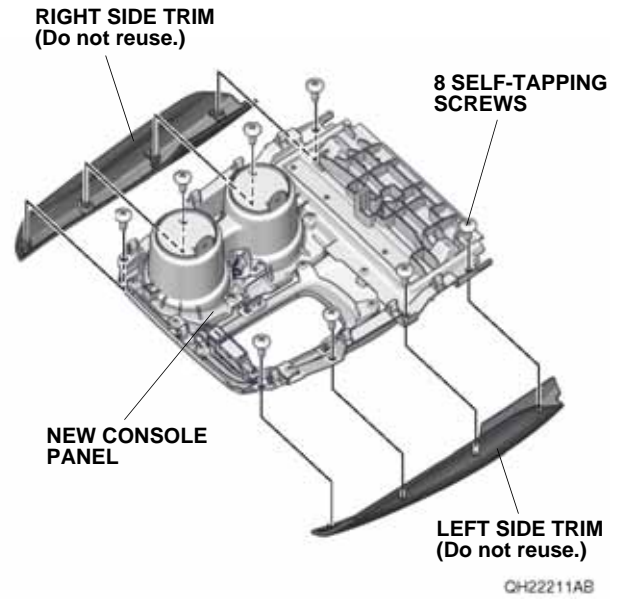

14. Install the left and right side trim to the new console panel with the eight self-tapping screws removed in step 12 or 13.

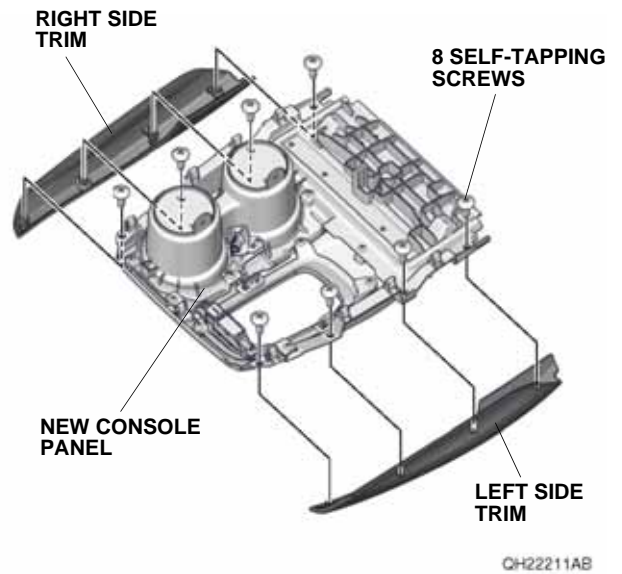

- Remove the tape to free the vehicle 2-pin connector, and plug the vehicle 2-pin connector into the new console panel. Plug the vehicle 4-pin connector into the vehicle switch if equipped, and secure the vehicle clip to the new console panel.

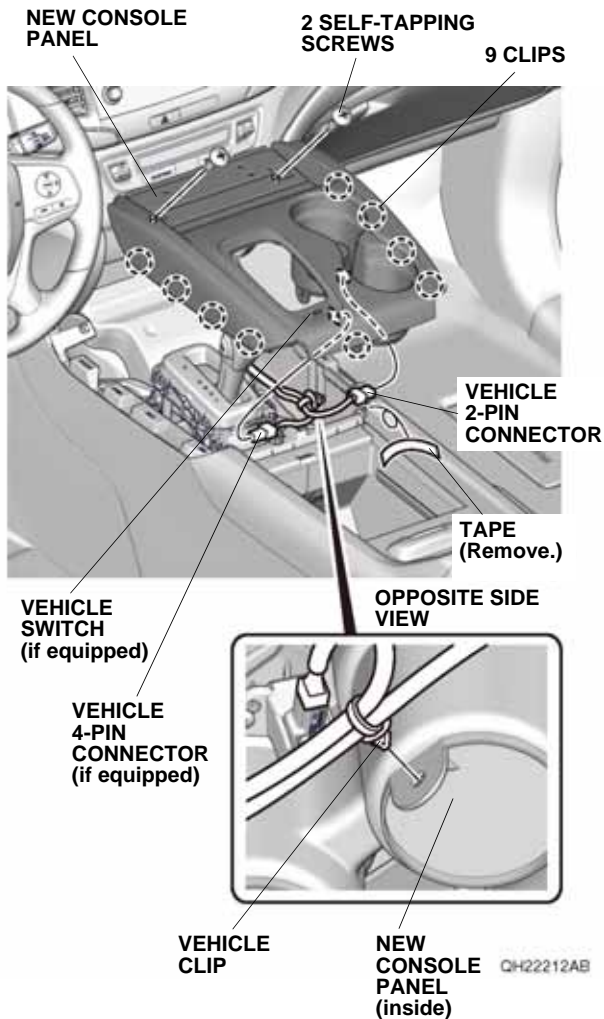

- Install the new console panel with nine clips and two self-tapping screws removed in step 6.
- Check that all wire harnesses are routed properly and all connectors are plugged in.
- Install all removed parts except for the front bulkhead cover and the intake air tube.
- Connect the negative cable to the battery.
- Install the front bulkhead cover and the intake air tube.
- Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
- Set the clock on vehicles without navigation.
- If necessary, restore the system back to normal operation as described in the service information.

Check the Operation of the Cup Holder Light

- Set the light switch set to the or position, make sure the cup holder light is on.
- Set the headlight switch to the AUTO position, and make sure the cup holder light is on with the parking lights or headlights.
- If the cup holder light does not come on, check the fuse and all the connectors.

