

INSTALLATION INSTRUCTIONS

Accessory

TALL WINDSCREEN P/N 08R70-MJP-A60

Application

CRF1000L/LD

MII 156


Publication No. MII 15641

MII 15641 Issue Date

February 2016

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

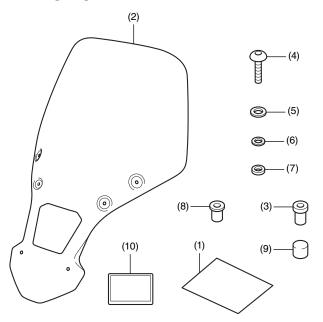

No.	Description	Qty
(1)	Installation Instruction URL	1
(2)	Tall windscreen	1
(3)	Well nut (large)	2
(4)	5 mm screw	2
(5)	Washer (White)	2
(6)	Washer (Black) (thin)	2
(7)	Washer (Black) (thick)	6
(8)	Well nut (small)	4
(9)	Thread protector	2
(10)	Label	1

TOOLS REQUIRED

Hex wrench (5 mm)

Synthetic detergent solution

(Water: Dish soap / 100: 1)

Shop towel
Torque wrench


TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


Item	N⋅m	kgf·m	lbf∙ft
5 mm screw	0.4	0.04	0.3

INSTALLATION


1. Remove the windscreen as shown.

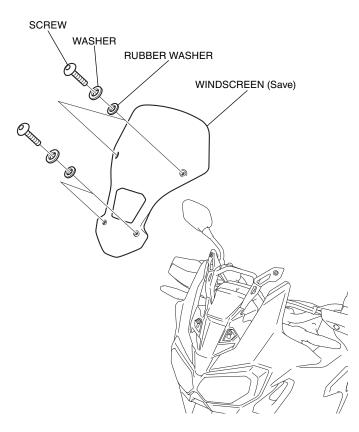


2. Remove the well nuts as shown.

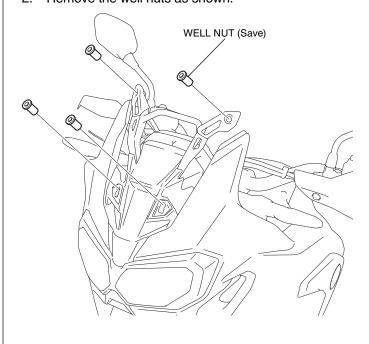


3. Install the well nuts as shown.

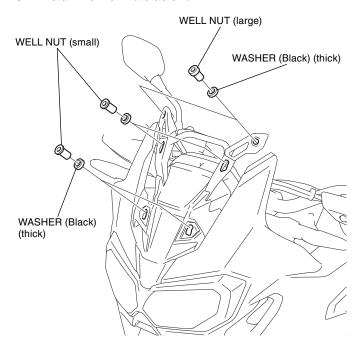

4. Loosely install the tall windscreen as shown.

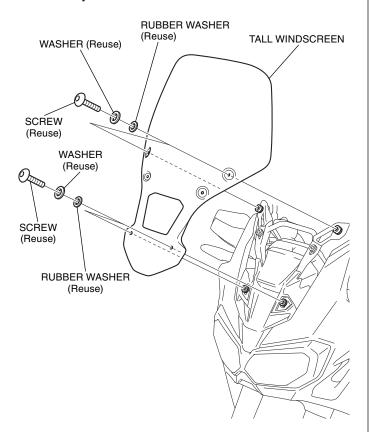


5. Loosely install the 5 mm screws as shown.

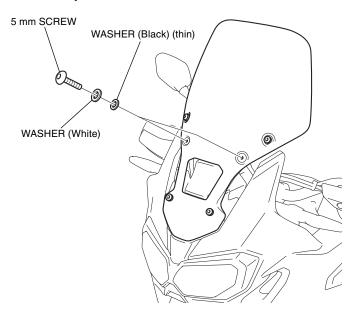

- 6. Tighten the loosely installed parts securely.
- 7. Install the thread protectors as shown.

<Rear side of the tall windscreen>

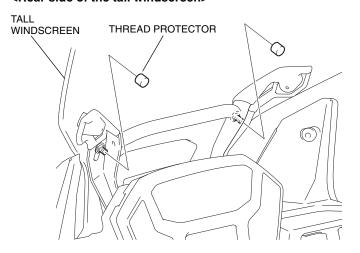

8. Attach the label in the position shown.

