



INSTALLATION INSTRUCTIONS

Accessory

FAIRING AIR DEFLECTOR
P/N 08R70-MGS-A30

Application

NC700X/XD

Publication No.


MII 13973

Issue Date

January 2012

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

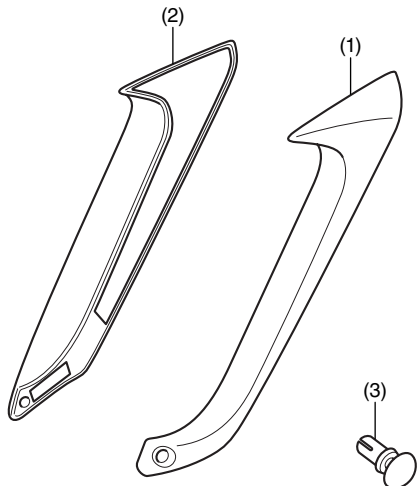

No.	Description	Qty
(1)	Right air deflector	1
(2)	Left air deflector	1
(3)	Clip	2

TOOLS AND SUPPLIES REQUIRED

Electric drill
 Drill bit (4 mm)
 Ruler
 Marker
 Electrical tape
 Isopropyl alcohol
 Shop towel

USE AND CARE INFORMATION


- Check the accessory mounts frequently.
- When this accessory becomes dirty, rinse it thoroughly with cool water to remove loose dirt, then wipe with a clean cloth or sponge. Do not use a brush to clean this accessory as it may scratch the surface.
- Never use petroleum solvents such as gasoline, thinner, or benzine to clean this accessory. Also do not use acid or alkaline cleaners.
- Wipe up spilled brake or battery fluid at once as they may damage the plastic surface.

INSTALLATION

NOTE:


- Take care not to damage the painted surfaces of the motorcycle.
- Heat the bonding surfaces with a hair dryer if the ambient air temperature is below 70°F (21°C).
- The adhesive reaches full strength in 72 hours. Wait at least 24 hours before riding your motorcycle.

1. Temporarily attach the right air deflector and mark as shown.

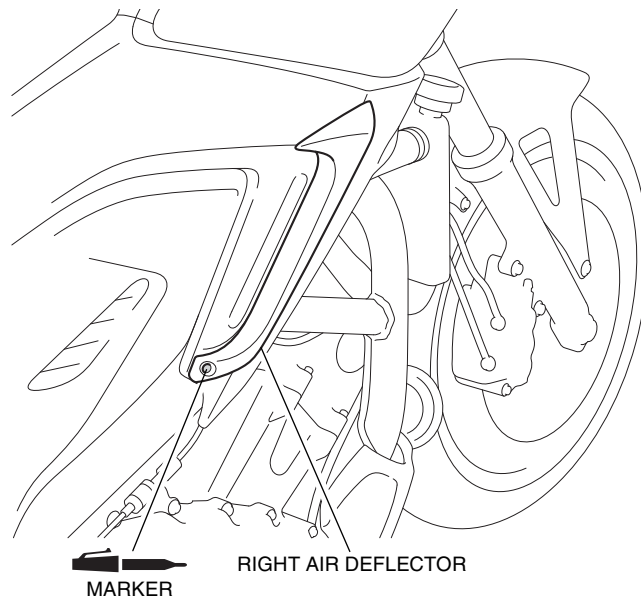

2. Drill at the marked point shown using an electric drill.


- Remove any burrs from the edge of the hole.

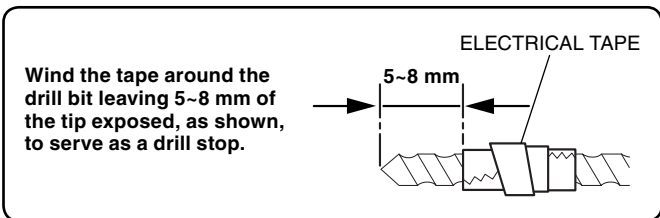


ELECTRIC DRILL
(4 mm BIT)

MARK


3. Peel back an end of the adhesive backings on the back of the right air deflector as shown.

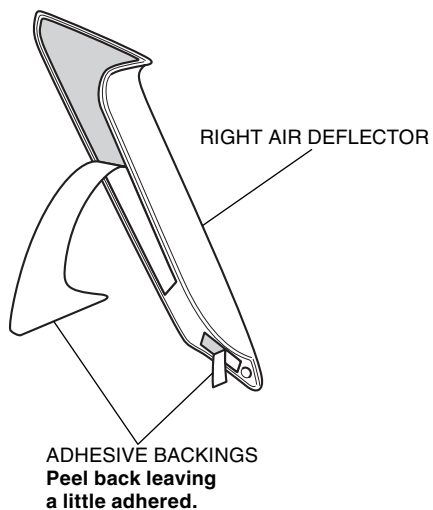

4. Loosely install the right air deflector as shown.

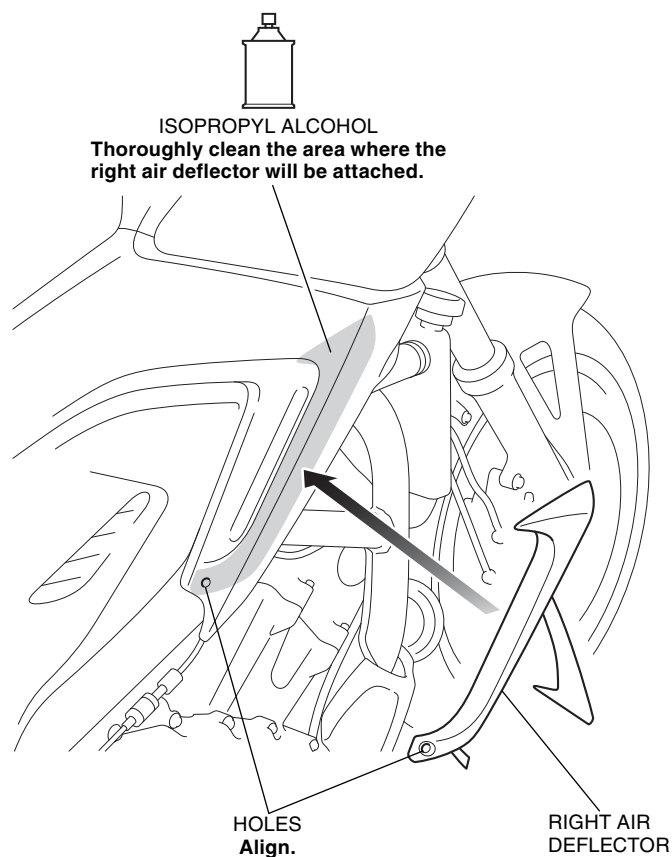


5. Install the right air deflector securely as shown.

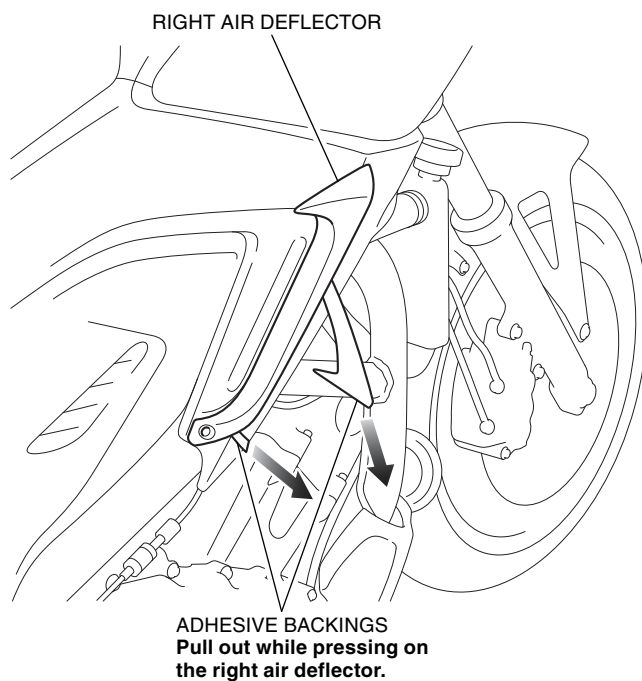

6. Apply adequate pressure to the attached right air deflector.

7. Install the clip as shown.

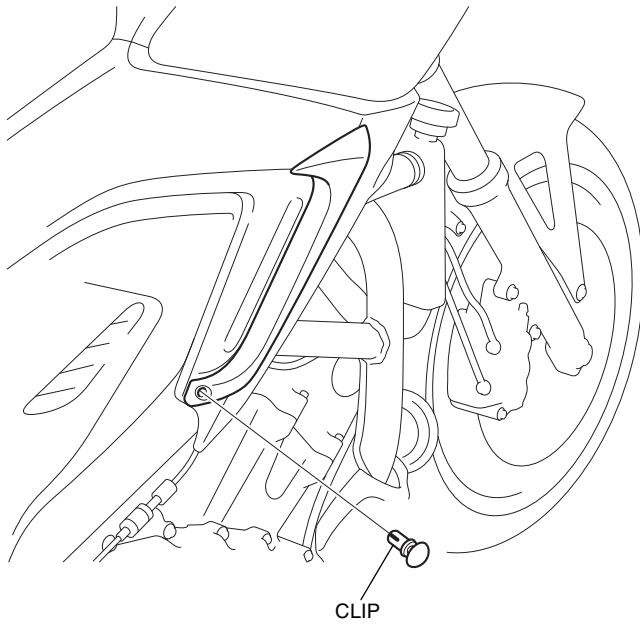

8. Repeat the installation on the left side.