

INSTALLATION INSTRUCTIONS

Accessory

COMFORT PASSENGER **FOOTPEG** P/N 08R71-MJP-G50

Application

CRF1000L/LD

Publication No.


MII 15641

Issue Date

February 2016

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

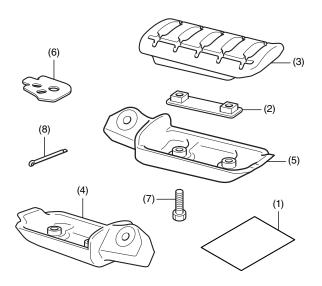

No.	Description	Qty
(1)	Installation Instruction URL	1
(2)	Step set plate	2
(3)	Step rubber	2
(4)	Right footpeg arm	1
(5)	Left footpeg arm	1
(6)	Step detent plate	2
(7)	5 mm bolt	4
(8)	Split pin	2

TOOLS AND SUPPLIES REQUIRED

Socket (8 mm)

Ratchet

Long nose pliers

Grease

Torque wrench

TORQUE CHART

Tighten all screws, bolts, and nuts to their specified torque values. Refer to the Service Manual for the torque values of the removed parts.


Item	N⋅m	kgf⋅m	lbf∙ft
5 mm bolt	5.2	0.5	3.8

INSTALLATION


ACAUTION

- · To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.
- 1. Pull down the left passenger footpeg as shown, and remove the split pin, washer, and pivot pin.


<Left side>

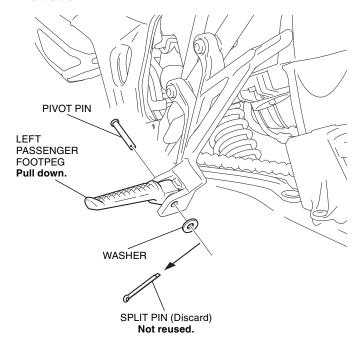


- 2. Remove the left passenger footpeg as shown.
 - · Remove it carefully to prevent the steel ball and spring from jumping out.

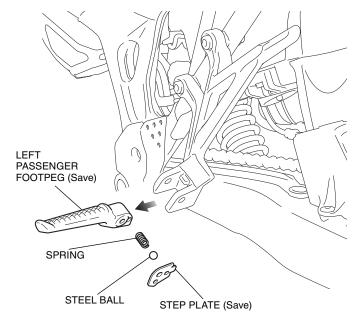


3. Assemble the step set plate and step rubber as shown.

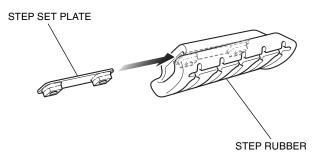


4. Install the assembled step rubber to the left footpeg arm as shown.

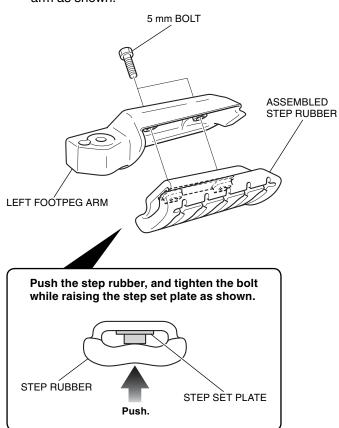


5. Apply grease to the positions shown.

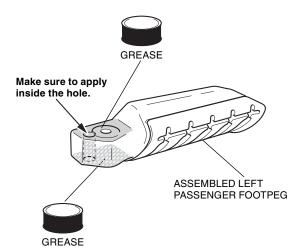


- 6. Install the spring, steel ball and step detent plate as shown
 - Hold down the step detent plate after the installation.

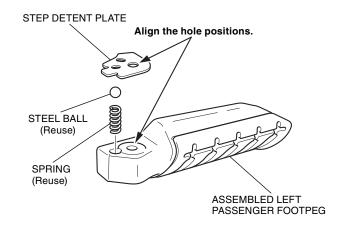


7. Install the assembled left passenger footpeg while holding down the step detent plate.

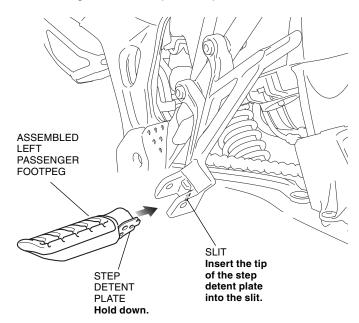


3. Apply grease to the pivot pin as shown.

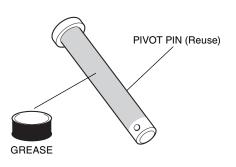


9. Install the pivot pin, washer, and split pin as shown.

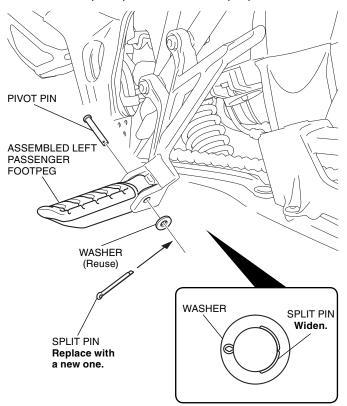

10. Check that the left comfort passenger footpeg is fixed at each position by moving it as shown.

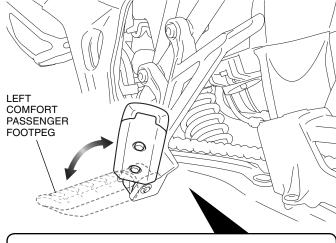

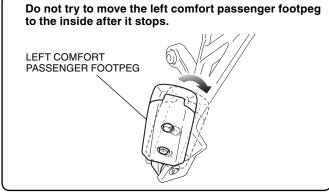

11. Repeat on the right side.