

INSTALLATION INSTRUCTIONS

Accessory

CHROME ENGINE TOP COVER P/N 08F74-MJN-D00 Application

CTX1300/D


Publication No.

MII 14925

Issue Date

April 2014

PARTS LIST

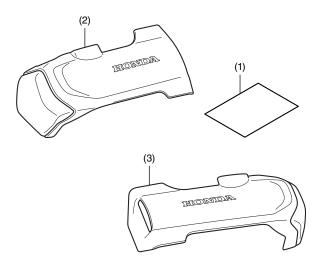

No.	Description	Qty
(1)	Installation Instruction URL	1
(2)	Right over head cover	1
(3)	Left over head cover	1

SUPPLY REQUIRED


Tape

INSTALLATION


A CAUTION

- To prevent burns, allow the engine, exhaust system, radiator, etc., to cool before installing the accessory.
- 1. Remove rear part of the left over head cover as shown.
 - When removing, make sure to hold the body part not to peel off the pad.


<Left side>

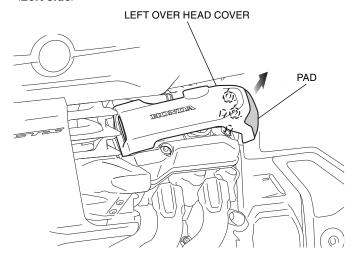

- 2. Remove the left over head cover as shown.
 - Protect the ____ area from damage using tape.

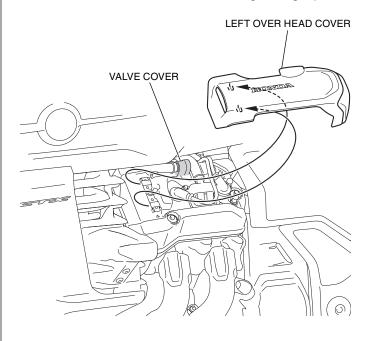

3. Remove the grommets as shown.

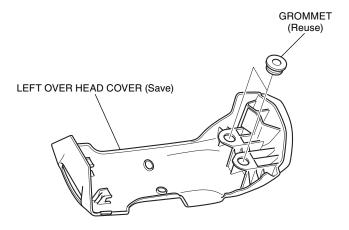

- 4. Install the grommets to the accessory left over head cover in the reverse order of removal.
- 5. Install the accessory left over head cover in the reverse order of removal.
- 6. Repeat Steps 1 through 5 on the right side.