



EVOTECH®
P E R F O R M A N C E

Honda CBR1000RR

Tail Tidy


Installation Instructions



Product No: PRN013719


Kit Contents


- A** 1 x Main Tail Tidy Bracket
- B** 1 x Indicator Bracket
- C** 1 x Light Bracket
- D** 1 x Retro Light
- E** 1 x Wire Connector
- F** 2 x Rubber Cap
- G** 6 x M4 x 8mm Button Head Bolt

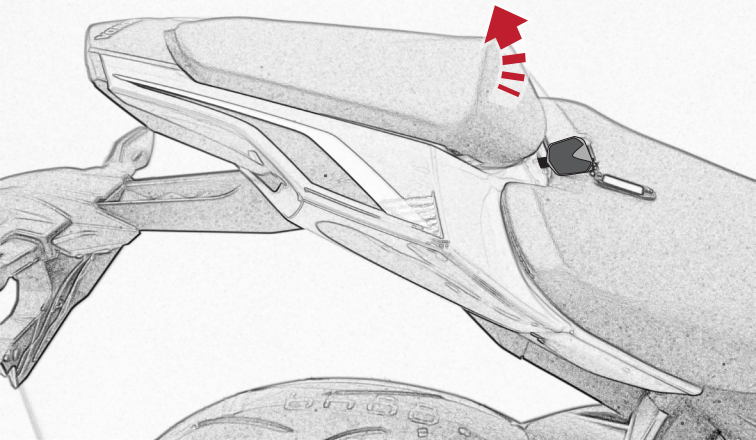






Repeat
Both Sides

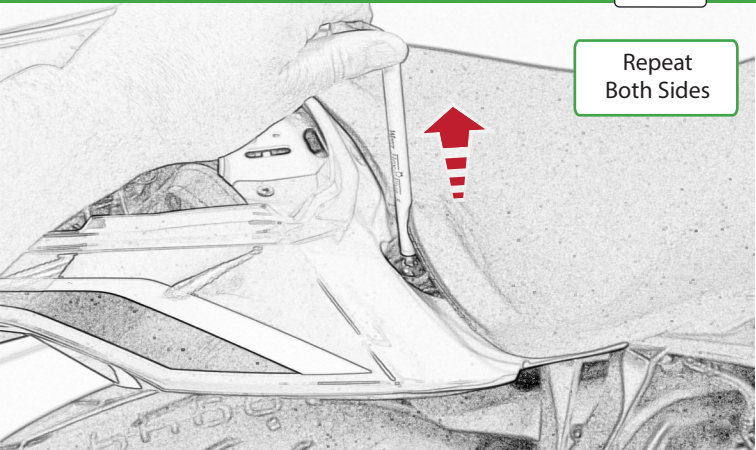




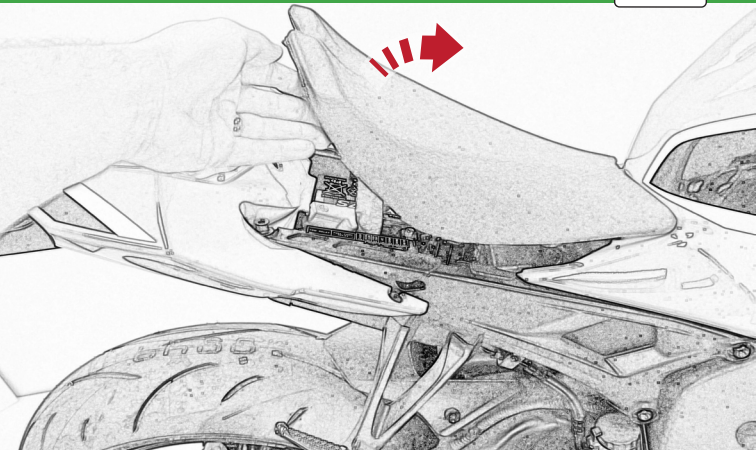


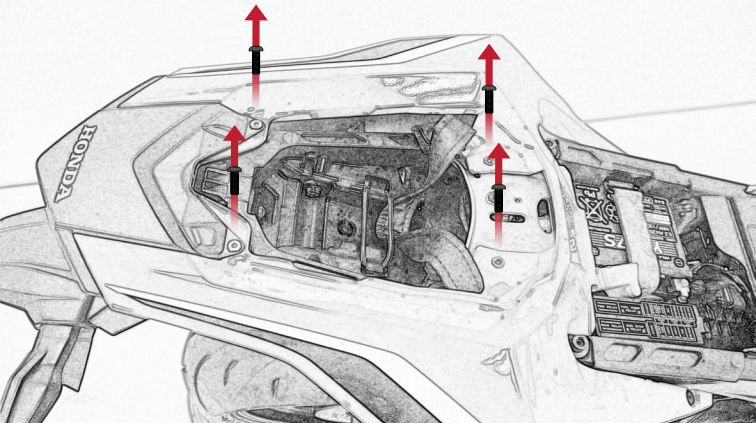


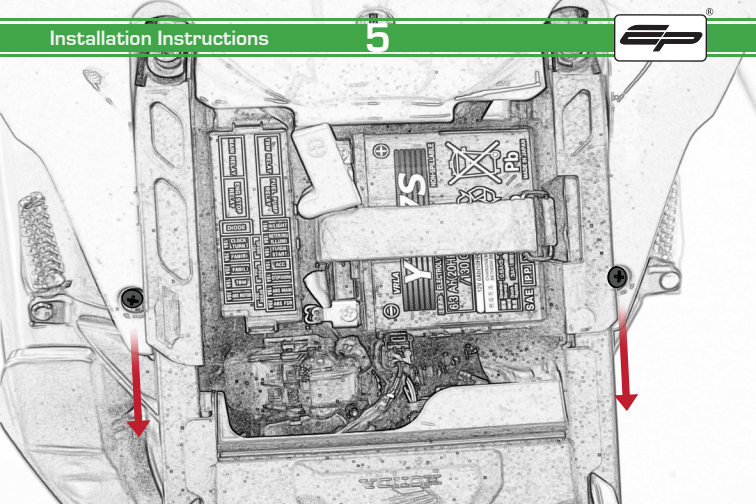


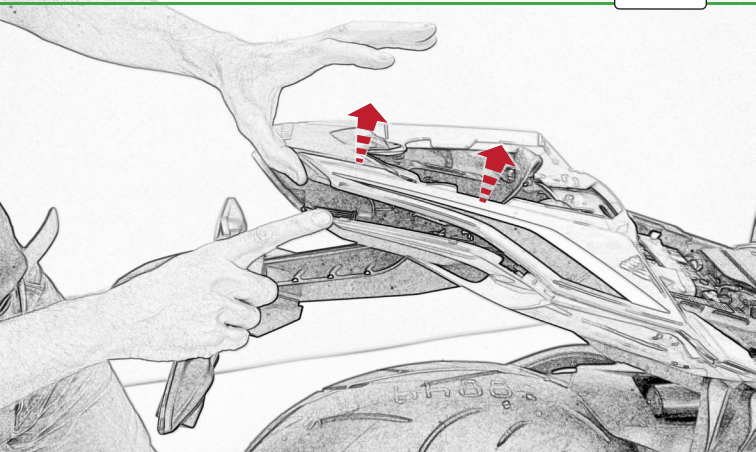


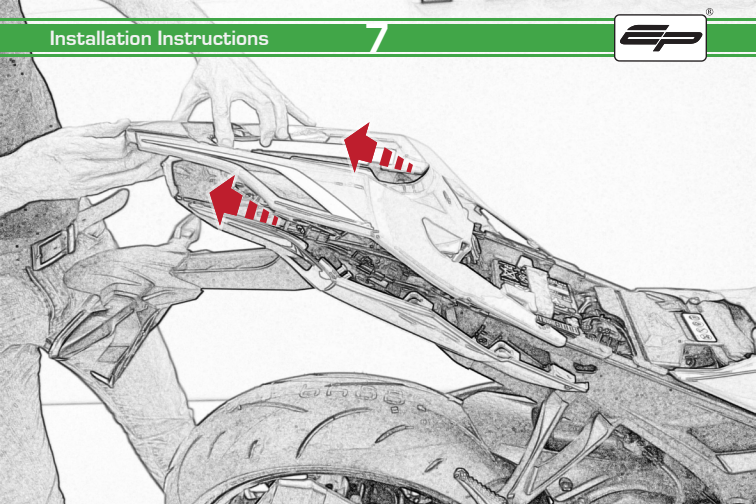

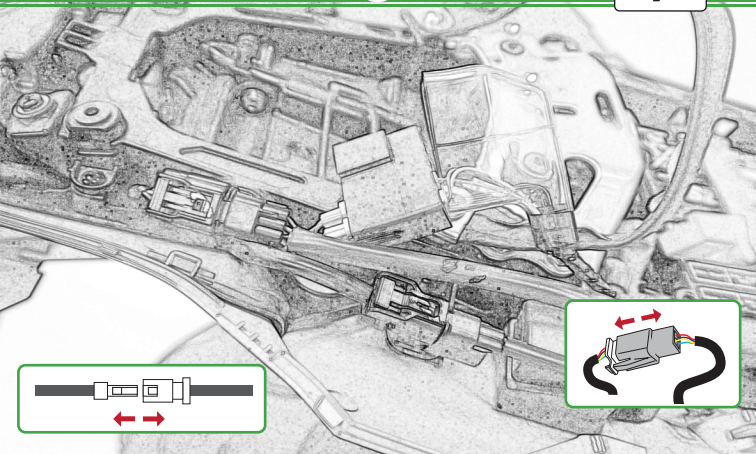


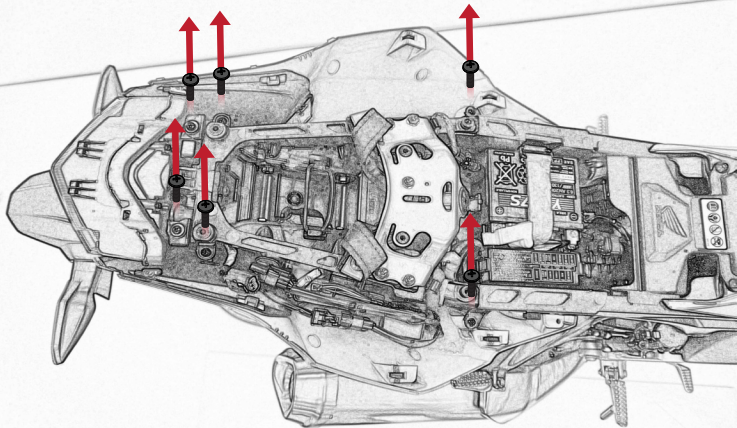



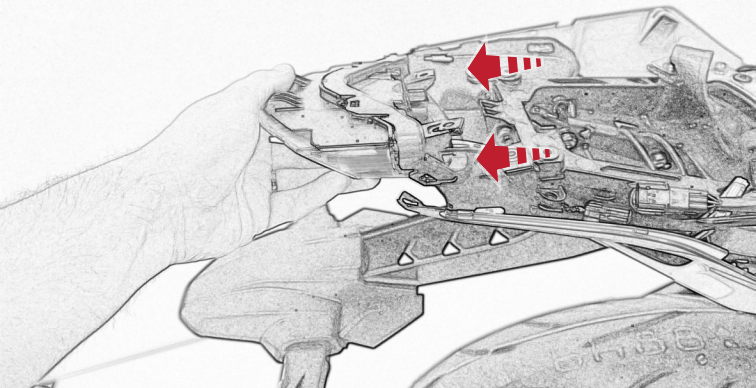


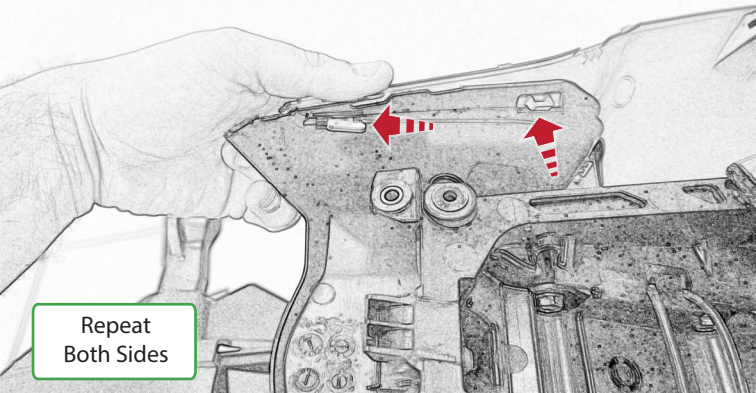


Repeat
Both Sides

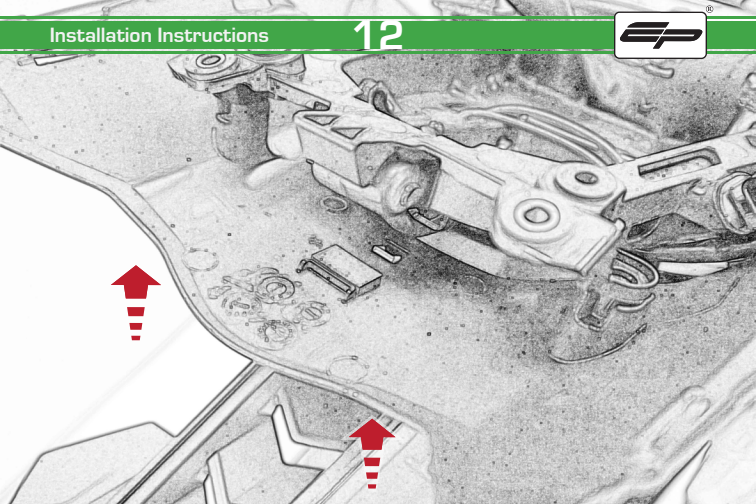


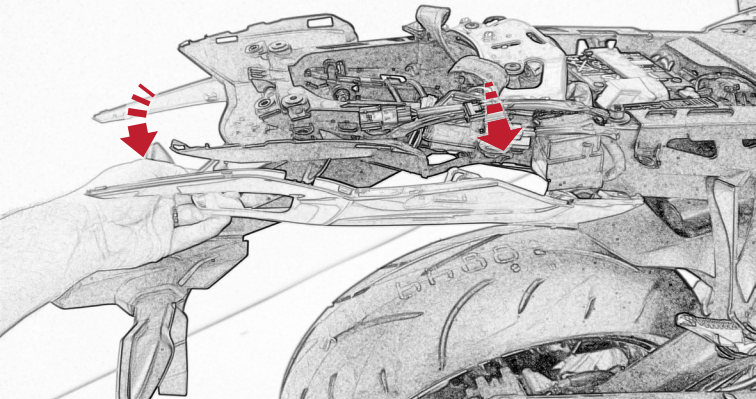


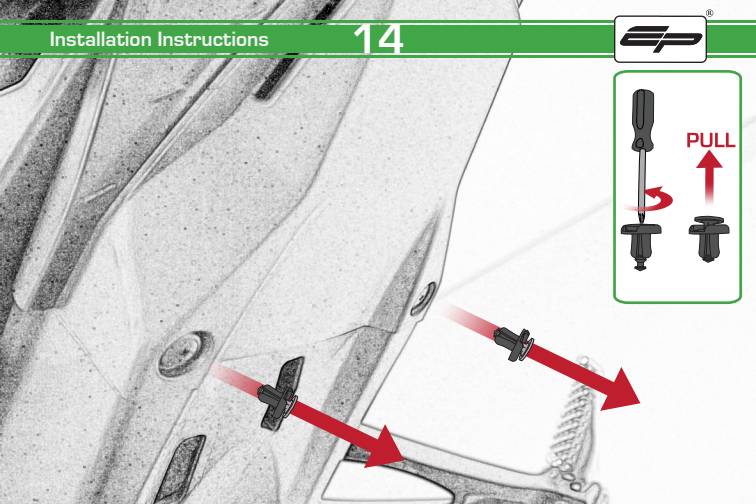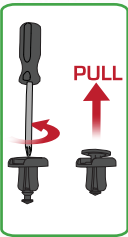




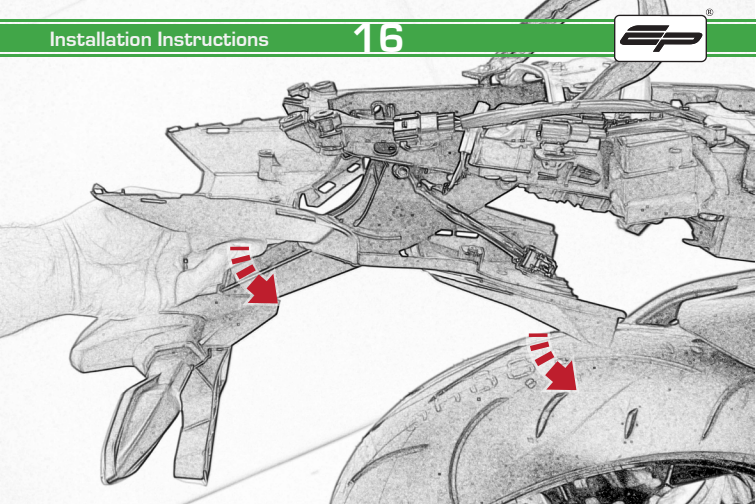


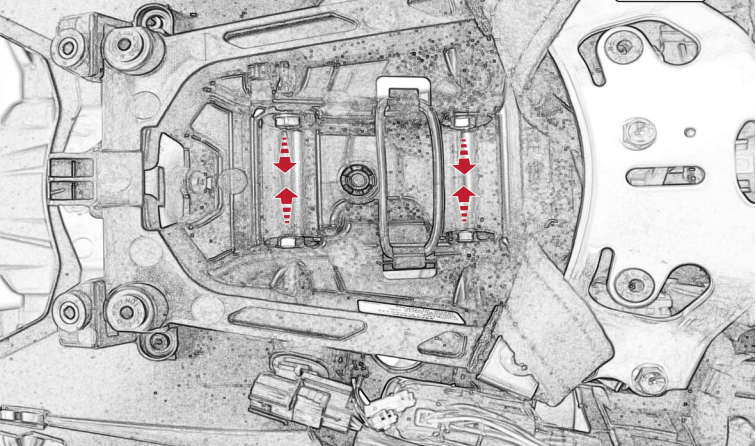


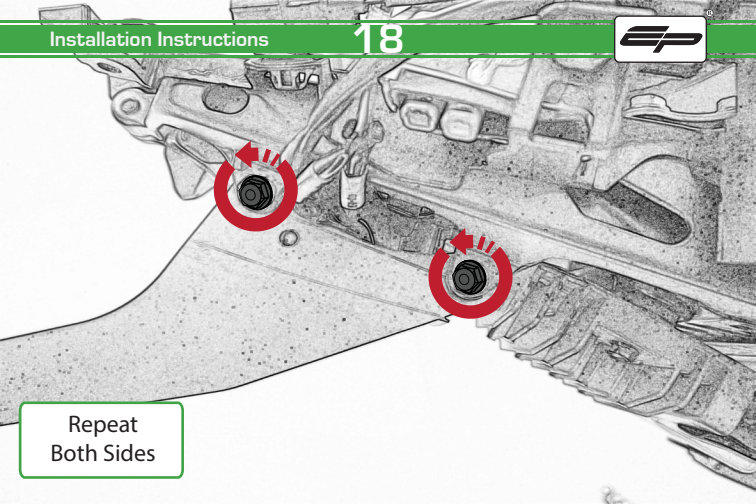



Repeat
Both Sides

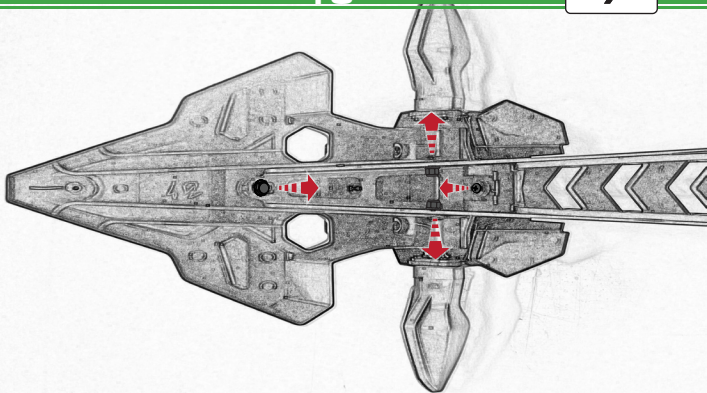


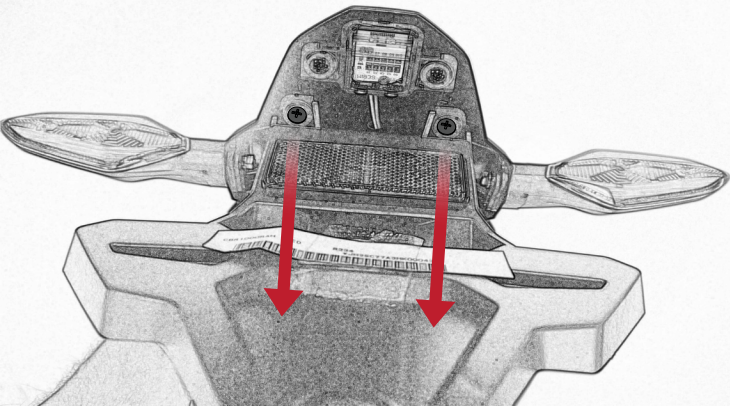


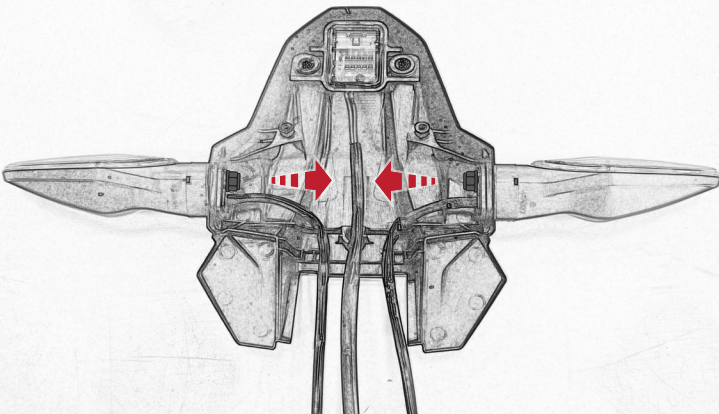


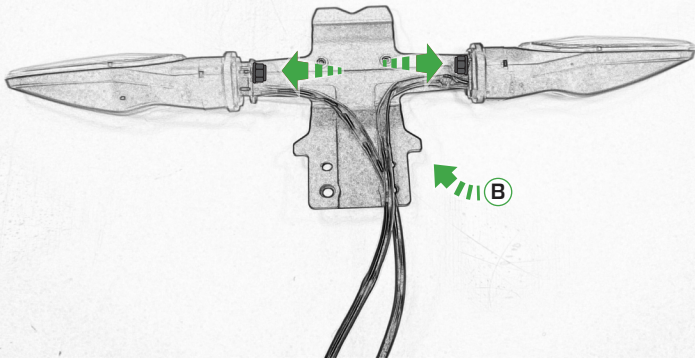


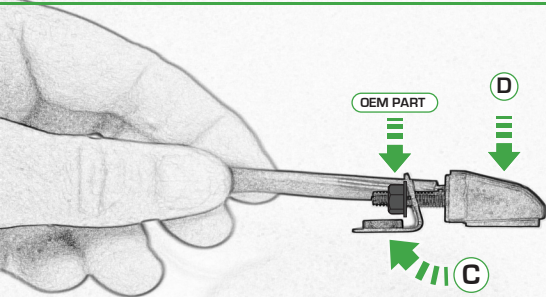

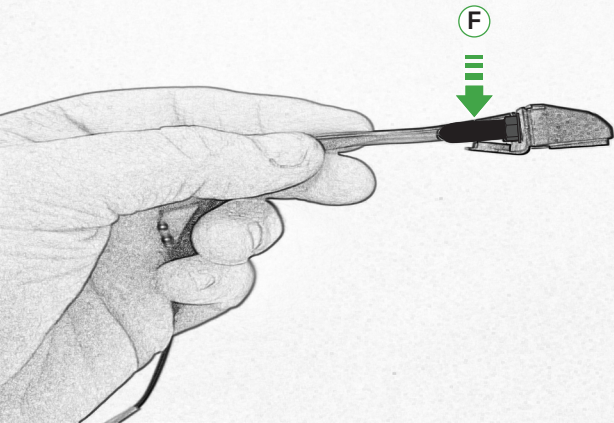




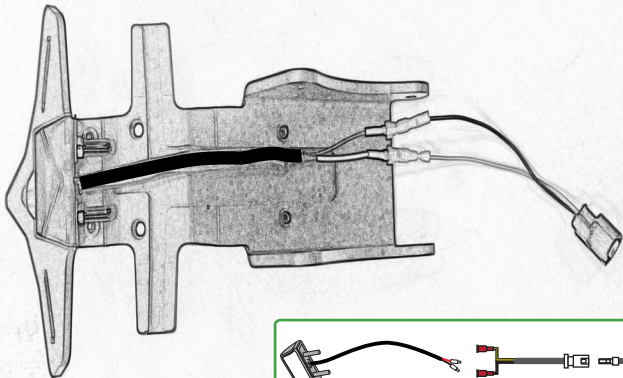

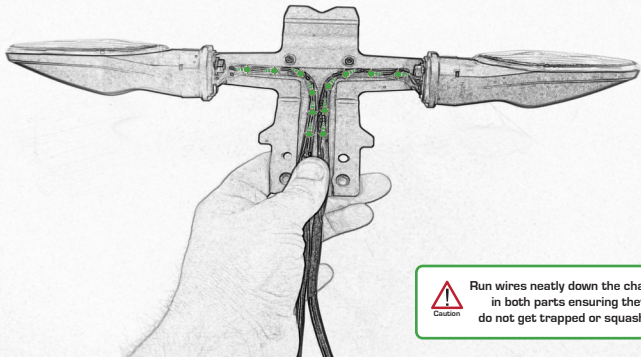



Caution


Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

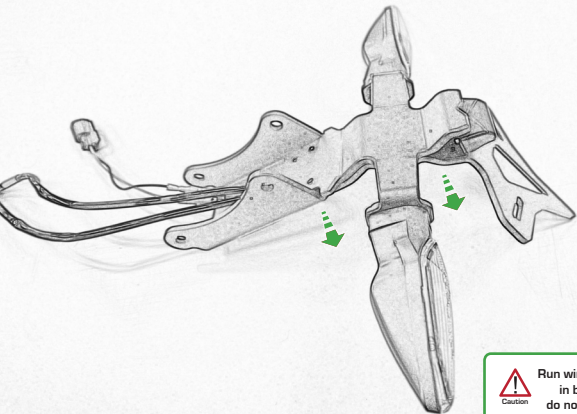


Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed

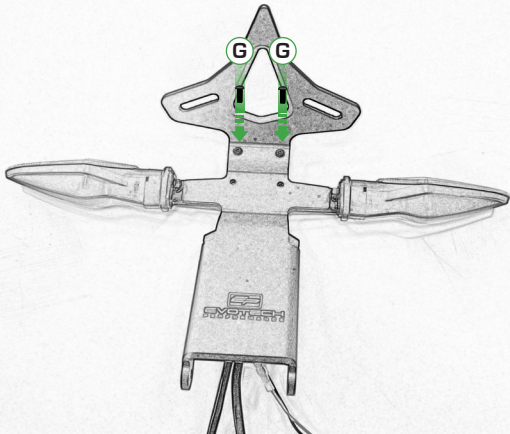

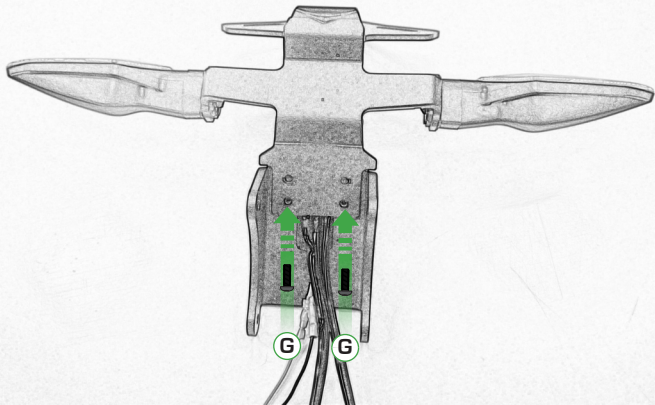


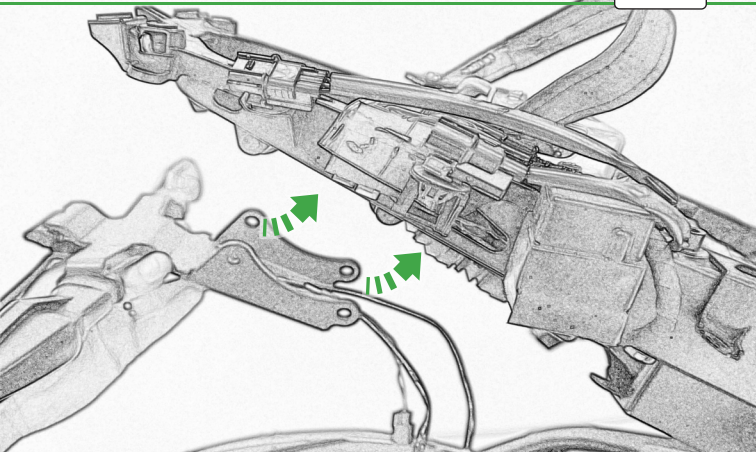

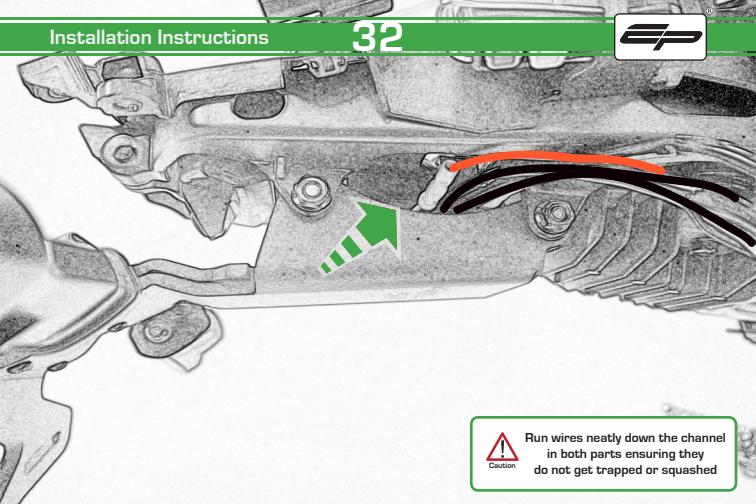



Caution


Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

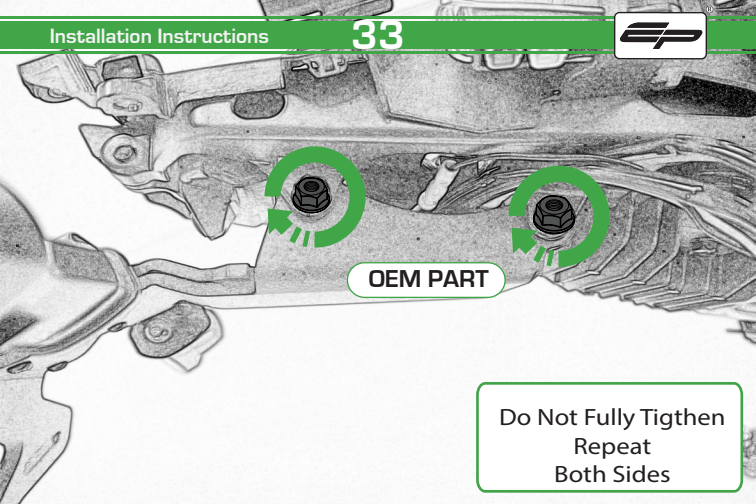

OEM PART

Do Not Fully Tighten
Repeat
Both Sides

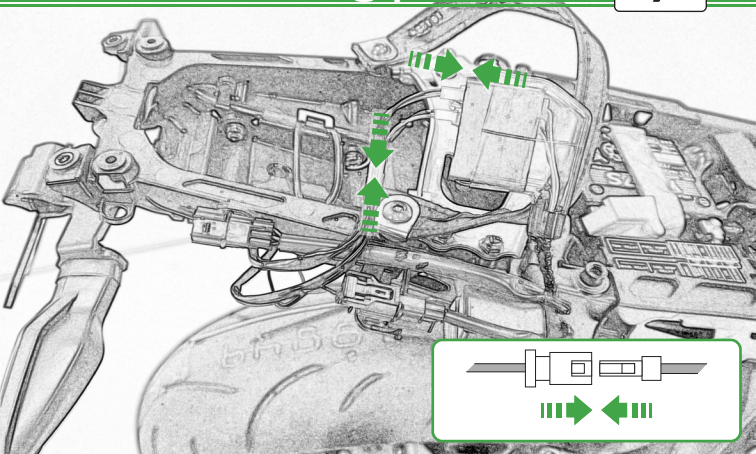


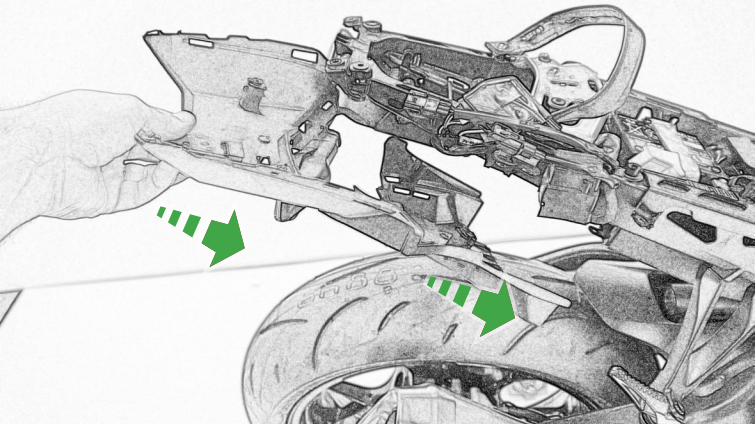




Caution


Please Ensure The Undertray
Is Located Behind The
Tail Tidy Main Bracket

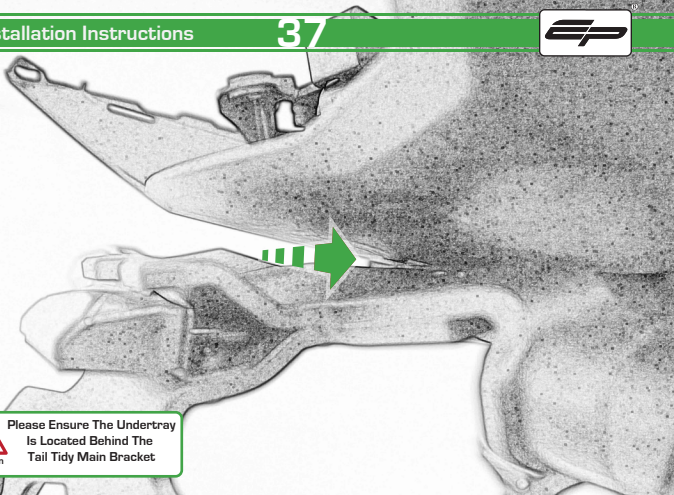



Caution

Please Ensure The Undertray
Is Located Behind The
Tail Tidy Main Bracket

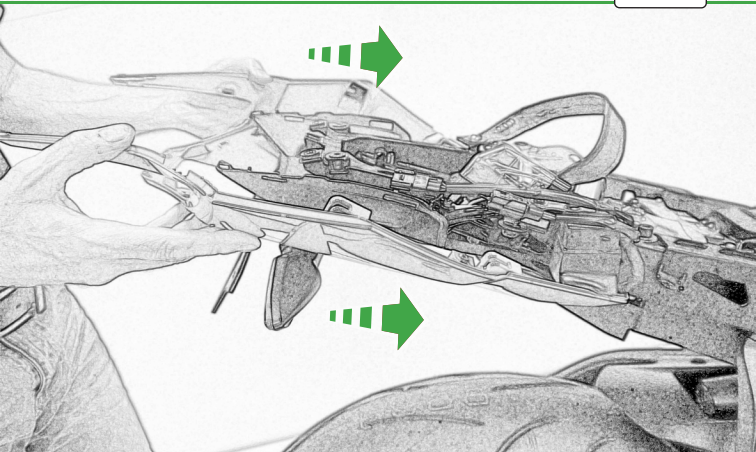

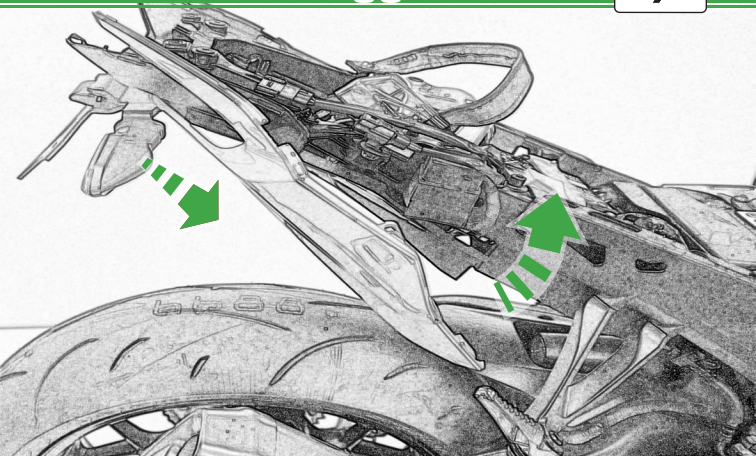


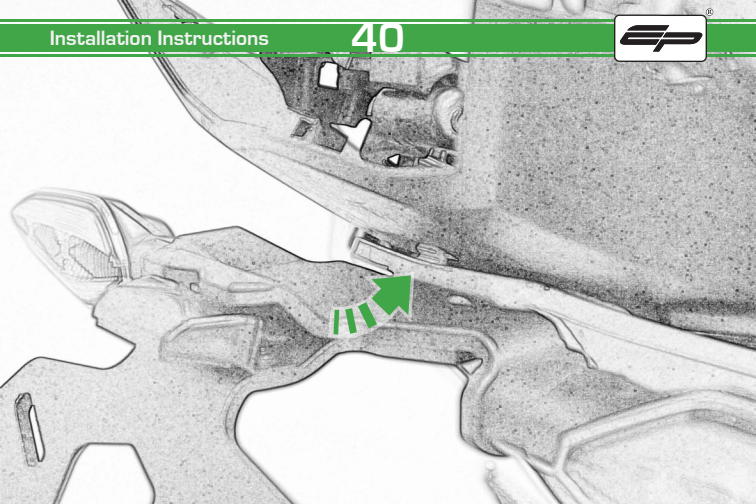


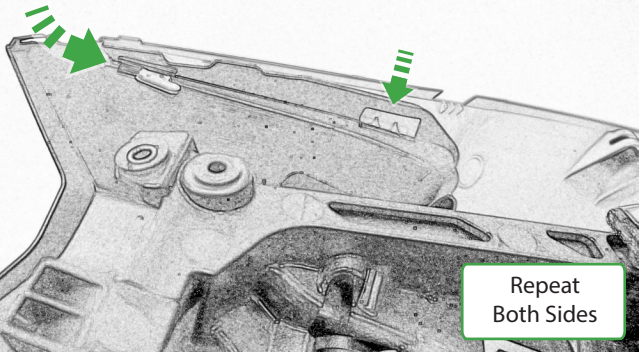



Repeat
Both Sides



Repeat
Both Sides

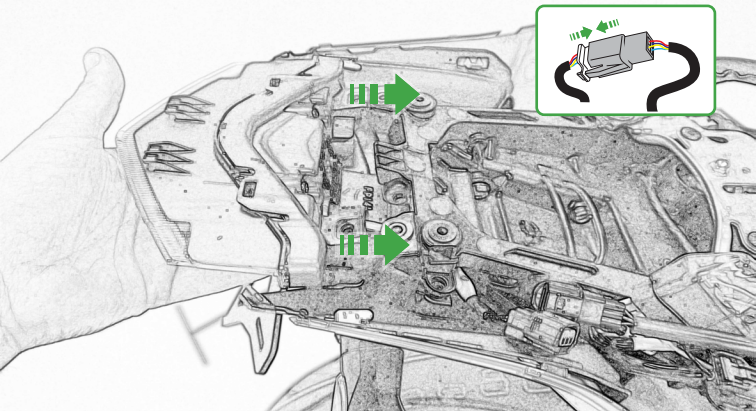


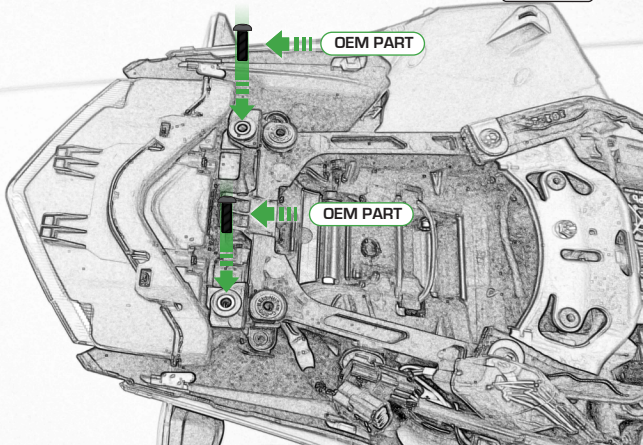

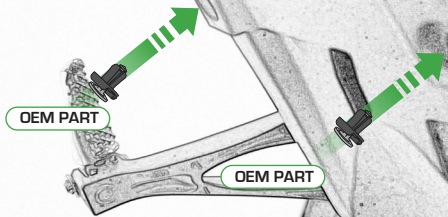



OEM PART

OEM PART

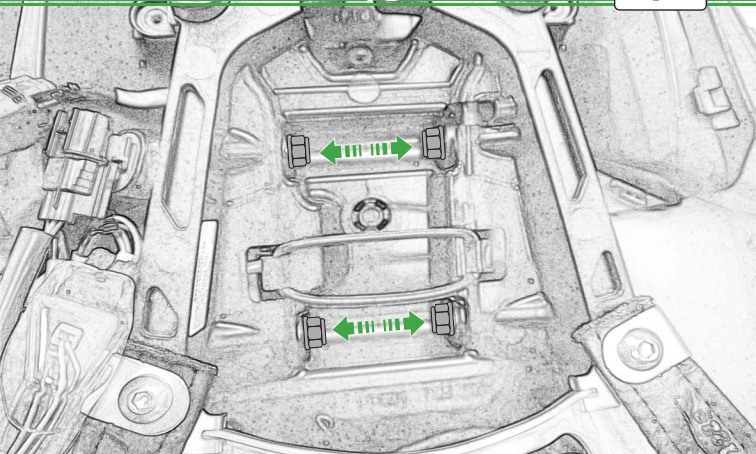



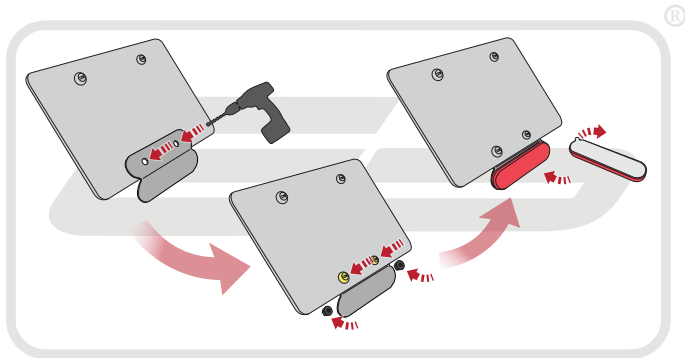

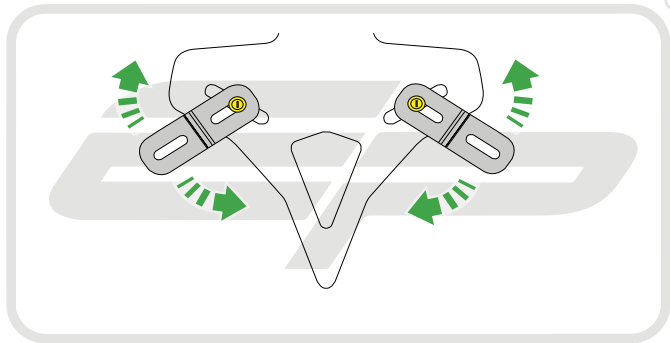



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com